

## BOLT- ON ANTENNA INSTALLATION GUIDE - SLOTTED NUT

1



Make a 3/4" hole in vehicle where center of antenna will be located.

2



Pass connectors through hole.

3



Pull cable until threaded end appears in hole.

4




Install nut to threaded lug.

5



Tighten nut two turns after contact to inside surface.

6

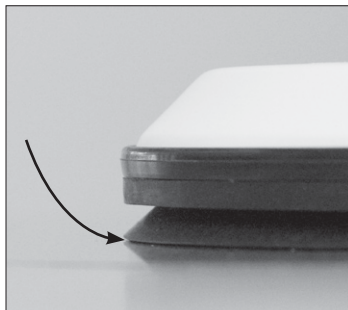

Make sure gasket is seated so water and dirt can not enter under the antenna. If gasket is not seated, continue tightening nut until a seal is formed.