

# **iSavi**<sup>m</sup>

# QUICK START GUIDE

Guía de inicio rápido Guide de démarrage rapide クイックスタートガイド Guia de início rápido

Краткое руководство пользователя

快速入门指南

دليل البدء السريع







Your iSavi™ terminal can generate a significant amount of heat depending on the system activities such as continuous transmission over a period of time and the underside surface will be hot.

Note: Reduce the risk of heat related injury by adhering to the following:

- 1. Handle with caution when touching the underside surface of the terminal, especially when in use or just after powering down.
- 2. Wait for the terminal to cool after powering down before stowing the device in an unventilated manner.
- 3. Do not leave children unattended within reach of the terminal.



Votre récepteur/terminal "iSavi™ peut générer une grande quantité de chaleur selon les activités du système, telles que la transmission continue pour une longue période, et la surface inférieure sera chaud.

Veuillez noter qu'on peut diminuer le risque d'une blessure causée par la chaleur en vous conformant aux directives suivantes:

- Manipuler avec précaution lorsqu'on touche la surface inférieure du récepteur/terminal, en particulier au moment de l'utilisation ou juste après avoir éteint le récepteur/terminal.
- Attendre jusqu'à le récepteur/terminal se soit refroidi après l'avoir éteint, avant l'entreposage dans un espace non ventilé.
- Ne laissez pas les enfants sans surveillance à portée du récepteur/terminal.

03 English 08 Español 13 Français 18 日本語 23 Português 28 Русский 33 中文 18 Uspañol I

While the information in this Quick Start Guide has been prepared in good faith, no representation or warranty, express or implied, is made or given as to the adequacy, accuracy, reliability or completeness of such information. Addyalue Innovation Pte Ltd nor their respective officers, employees or agents shall have any responsibility or liability to any person resulting from the use of the information in this Ouick Start Guide, Copyright © 2014 Addvalue Innovation Pte Ltd. All rights reserved. Addvalue, the Addvalue Enabled logo, Wideve, the Wideve logo, iSavi and iSavi logo are either trademarks or registered trademarks of Addvalue Technologies Ltd and/or its affiliates in Singapore and/or other countries. Inmarsat and the Inmarsat logo are trademarks of The International Mobile Satellite Organisation and are licensed exclusively to Inmarsat, IsatHub and the IsatHub logo are trademarks of Inmarsat, Inmarsat, the Inmarsat logo, IsatHub and the IsatHub logo are used by Addyalue Innovation Pte Ltd under licence from Inmarsat.

Part Number: 74B00137101

#### **WELCOME**

Congratulations on purchasing the Addvalue's Wideye™ iSavi™ satellite terminal.

## **SHARE ACCESS TO DATA**

Devices connected to your iSavi™ satellite terminal over Wi-Fi can access data and calls.



#### CONTROL SHARED ACCESS

The features of your iSavi™ terminal can be conveniently controlled remotely.



Use a tablet or smart phone to share and control data access\*.






For control of your iSavi™: IsatHub Control app For satellite calls: IsatHub Voice app


DOWNLOAD NOW Apps are available for iOS & Android.



Alternatively use any web browser to control your iSavi™ satellite terminal.

\* Apps are supplied by Inmarsat

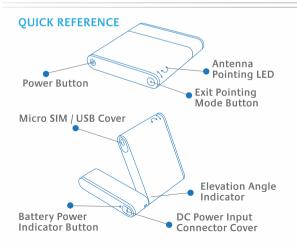



Other contents in the box



Charger Micro USB & Adapters Cable



USB Drive




Quick Start Guide




My iSavi™ Bag

## **GET STARTED**

Insert the Micro-SIM card with its gold-contacts facing down.

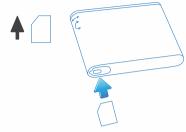

# Attach battery

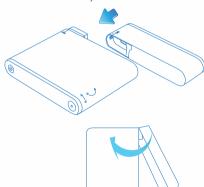


Attach the battery gently in the direction as shown until a click is heard.

Insert charger lead and then plug the adapter.

Your iSavi™ should be charged for eight hours before first use.

Charging will cease automatically once the battery is fully charged.

You can check the battery level by pressing the 'Battery Power Indicator Button'.

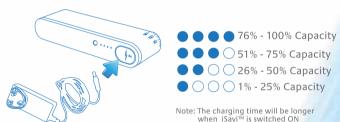

After charging, place your iSavi $^{\text{IM}}$  outside in a position with a clear view of the sky.


Switch your iSavi™ on and leave it for a minimum of 1 minute.

Your iSavi™ must acquire a GPS fix before you can connect to the network for the first time.

Power Button

### POINT THE TERMINAL AND CONNECT TO NETWORK

Make sure you place your iSavi™ in the open air, with a clear view of the sky. Your iSavi™ needs to be pointed towards the sky in the correct direction to ensure connection to the satellite network.

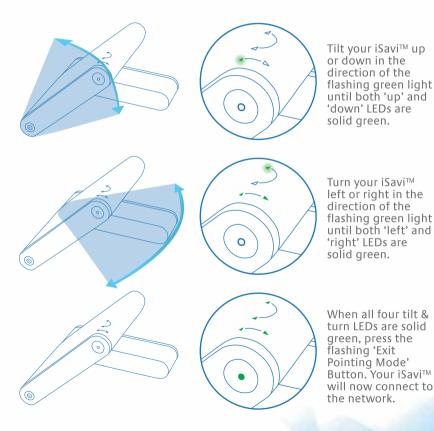

If the LEDs display any other pattern of illumination refer to the User Guide for full instructions



For safety reasons, never stand closer than one metre in front of your iSavi™ terminal's transceiver when it is connected to the network

#### **ACCESSING DATA AND CALLS**

#### STEP 1

Connect to your iSavi™ over Wi-Fi by selecting it from the list of available Wi-Fi networks.

The default Wi-Fi network name (SSID) and password can be obtained from the product label on the back of the iSavi™ terminal.



Note: For your security, please change the Wi-Fi password at the first opportunity.

#### STEP 2

For smart device control of your iSavi™, open the IsatHub Control app and follow the instructions presented to get started.

iOS and Android apps are available from App Store and Google Play respectively.

For control of your iSavi™ over web browser, access the web console by opening any web browser and type http://192.168.1.35 (http://iSavi) into the address bar.





# STEP 3

To access your chosen control interface, the default credentials are:

USERNAME: admin PASSWORD: 1234

For details, please refer to iSavi™ User Guide

#### STEP 4

Once your iSavi™ is connected to the network, you are ready to start making and receiving calls on any iOS or Android smart device.



The IsatHub Voice app is available from App Store and Google Play. It is advised to install the application before connecting to the iSavi™ satellite terminal.



When you first access data over the network, you may need to enter the APN username and password supplied to you with your SIM card by your service provider. Please make sure you have these available if required.



#### STEP 5

Once your iSavi™ is connected to the network, you are ready to start a data session. Press the 'Data On' button to begin and 'Data Off' to end all connection to the Internet.



The web console provides data access through the 'Activate data connection' button on the Home page.



To stop access to data press 'Deactivate data connection'

For details, please refer to iSavi™ User Guide